



ACC-2035

Diamond Plate Kick Plate

E-Z-Go RXV

Installation Instructions



Contents of ACC-2035 Diamond Plate Kick Plate:

- a (1 ea.) Kick Plate
- b (4 ea.) #10 x 1.0" Self Tapping Screws

**Caution:** Please read through the instructions carefully. Look behind each drill location **BEFORE YOU DRILL**. Installer is responsible for damage (i.e. drilling into a wiring harness, battery, fuel tank etc.).

## Diamond Plate Kick Plate Installation

1. Remove existing decorative Kick Plate (if any).
2. Orient the new Kick Plate with the (2) rounded corners at the top; similar to the photo on the first page of these instructions.
3. Center the Kick Plate to the Body.


**Note:** It may be easier to do this while the Kick Plate rests on the floor of the Cart to avoid scratching the paint on the Body.

4. Once aligned, place the bottom of the Kick Plate on the lip of the Body.



5. Raise the Kick Plate against the Body to it's final position. The Kick Plate bottom will rest on the lip of the Body. The back of the Kick Plate will rest firmly against the Body.
6. Secure the Kick Plate with (4) #10 x 1.0" Self Tapping Screws. Place them in the (4) corners about 1/4" away from the edges.

**Note:** Look behind each drill location **BEFORE YOU DRILL**. Installer is responsible for damage (i.e. drilling into a wiring harness, battery, fuel tank etc.).

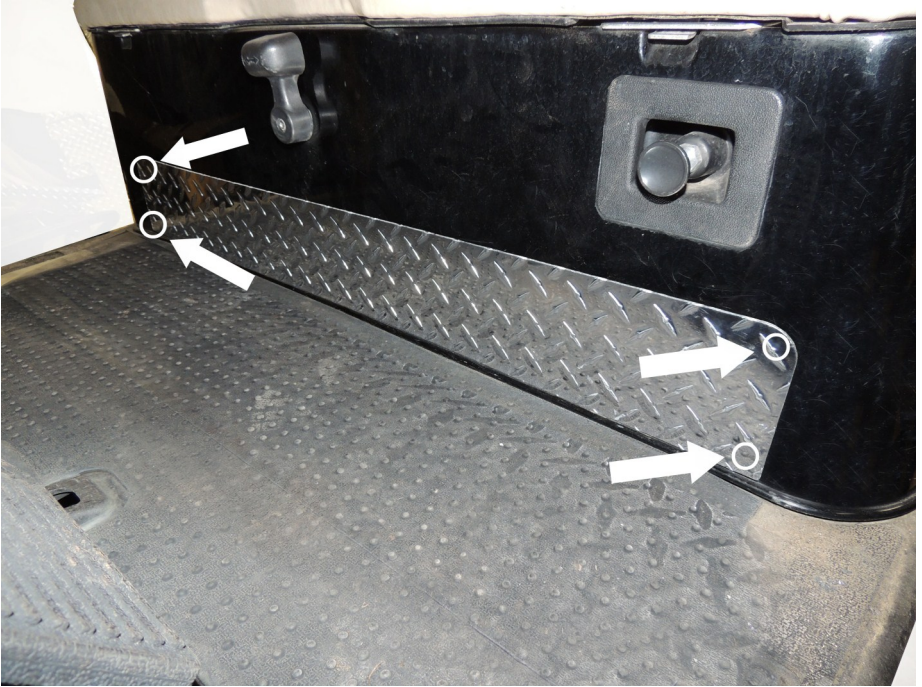

This completes the installation of your RXV Diamond Plate Kick Plate.  
Please enjoy safely!

