



RB-005

Diamond Plate Running Board Set

Club Car Precedent

Installation Instructions



Contents of RB-005 Diamond Plate Running Board Set:

- a (1 ea.) Driver Side Running Board
- b (1 ea.) Passenger Side Running Board
- c (4 ea.) Support Brackets
- d (14 ea.) #10 x 1.5" Self Tapping Screws
- e (4 ea.) #10 x 1.0" Self Tapping Screws

Caution: Please read through the instructions carefully. Look behind each drill location BEFORE YOU DRILL. Installer is responsible for damage (i.e. drilling into a wiring harness, battery, fuel tank etc.).


Passenger Side Diamond Plate Running Board

Note: Passenger side is shown in the photos for all steps.

1. Place the Passenger Side Running Board over the existing, factory Rocker Panel. The rear lip should wrap around the rear wheel well.



2. Push the Running Board towards the front of the cart and into the cart for a snug fit.
3. Once in place, drive (2) #10 x 1.5" Self Tapping Screws into the top of the Running Board plate approximately 1.0" from the outer wall of the cart.

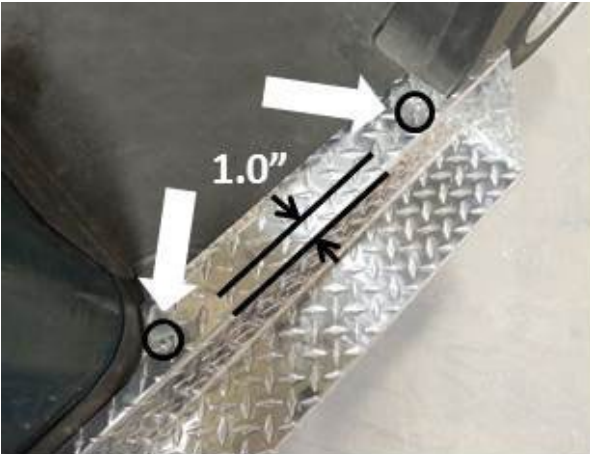


4. Lastly, drive (1) #10 x 1.5" Self Tapping Screw into the side of the Running Board near the rear wheel well and the seam of the factory Rocker Panel. The screw placement should be about one third of the distance down from the top of the Running Board.




Support Bracket Installation

Note: Lifting the cart may make the installation easier. Do so carefully.

1. Drill (3) 3/16" pilot holes through each of the (4) Support Brackets as shown below. The single hole should be centered on the Bracket and 0.5" away from the narrow edge of the bracket. The last two holes should be placed 1.5" away from the opposite narrow edge and roughly 0.5" in from the longer edges.

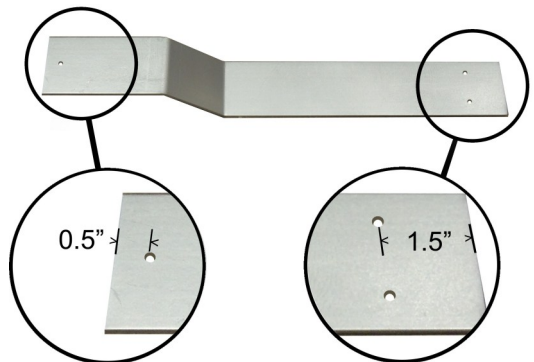

2. Position (2) Support Brackets under the cart between the Chassis and the Running Board. Wedge the end of the Support Bracket (the side with (1) hole) into the lip of the Running Board. The opposite end with (2) holes will be under the Chassis. Space both brackets evenly.

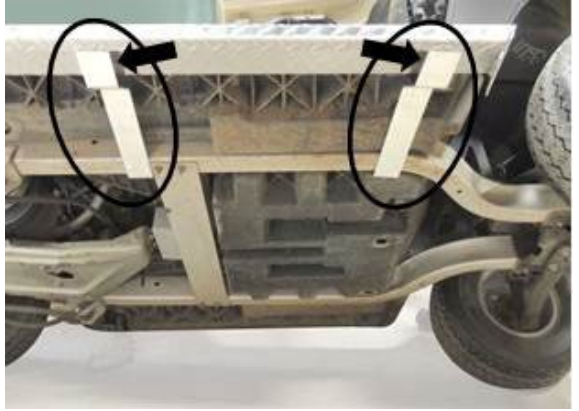

3. Screw (2) #10 x 1.5" Self Tapping Screws up through the Bracket and into the Chassis using the pre-drilled holes in the Bracket as a guide.
4. Screw (1) #10 x 1.0" Self Tapping Screw up through the lip on the underside of the Running Board to the last pre-drilled hole in the Bracket.
5. Repeat Steps 3 and 4 for the second Support Bracket.



Driver Side Diamond Plate Running Board

1. Repeat all steps in the sections above for the Driver Side Diamond Plate Running Board and Support Brackets.

This completes the installation of your Precedent Diamond Plate Running Boards. Please enjoy safely!